




Monteringsvejledning

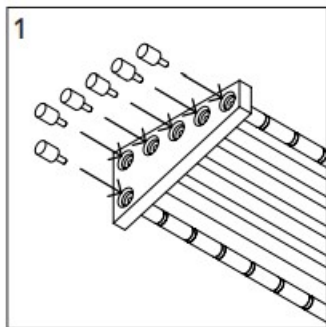


Find først den ene side frem og sæt dernæst rundstokkene i som vist. Læg mærk til placering på de to rundstokke med riller.

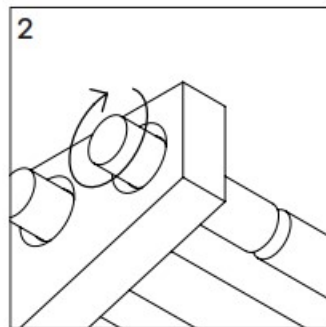


Sæt alle de små træskruer med gevind ind gennem hullerne i sidestykket og skru dem fast i rundstokkene med fingrene.

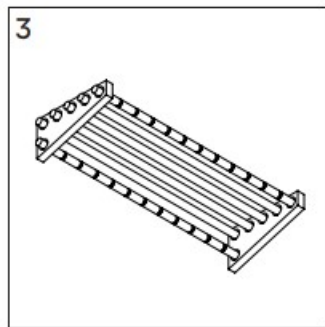


Gentag punkt 1 og 2 med det andet sidestykke. Nu har du samlet din nye Moodrack og er klar til at montere den på væggen.

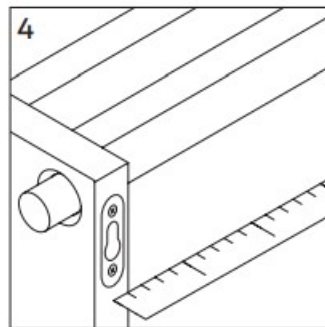


Mål afstand mellem centrum af de to vægbeslag i hver Moodrack side.

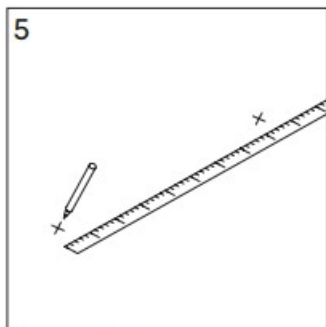


Afsæt markering med afstanden du lige målte. Sørg for at punkterne er i vater.

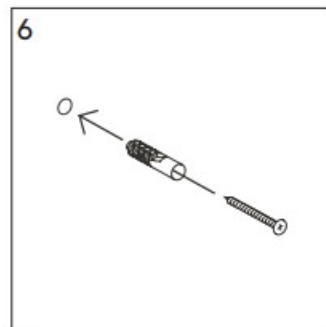

Bor hul ved de to markeringer. Indsæt rawplugs i de borede huller. Skru til sidst vedlagte skruer i hullerne.

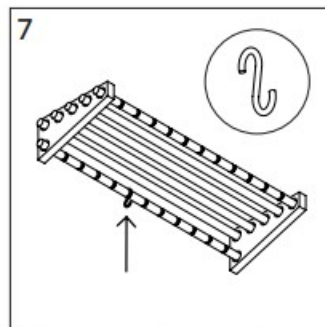


Klik de vedlagte kroge ned i rillerne på rundstokkene med riller. Placer kroge efter netop dit behov.

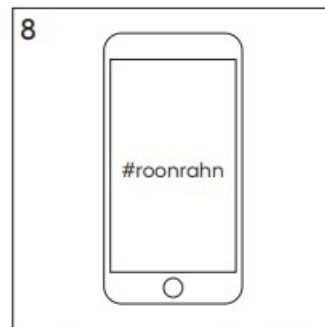


Del dit nye originale Roon & Rahn produkt med dine venner, og bliv samtidig inspireret af andre.


Mounting instruction

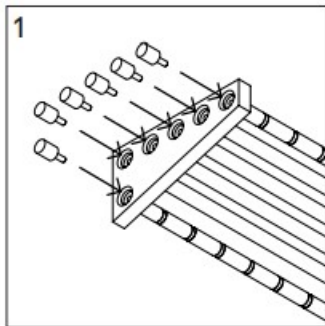


1
Locate one of the two sides and then put in the wood poles as shown. Notice the placement of the two round poles with grooves.

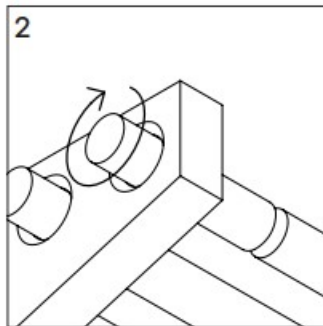


2
Mount all of the small wooden screws through the holes of the side and with your fingers screw them into the round poles.

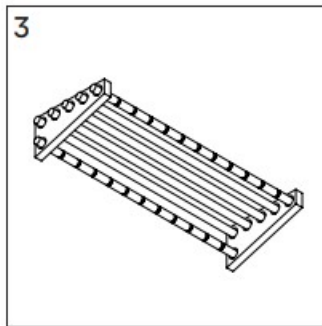


3
Repeat step 1 and 2 with the final side. Now you have assembled your new Moodrack and are ready to mount it on the wall.

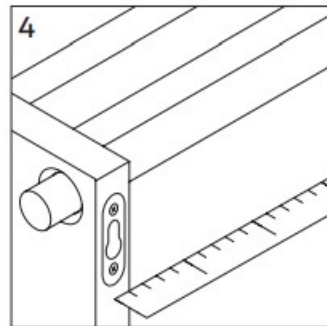


4
Measure the distance between the center of the wall mount on the back of each Moodrack side.

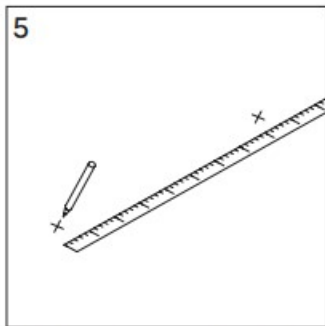


5
Mark the measured distance on the wall. Make sure it is leveled.

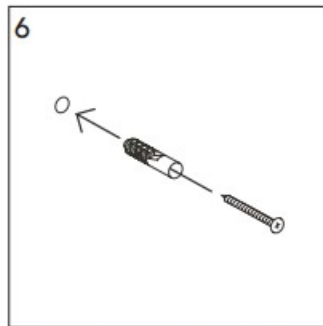

6
Drill a hole at the two marks. Insert the wall plugs and screw in the enclosed screws.

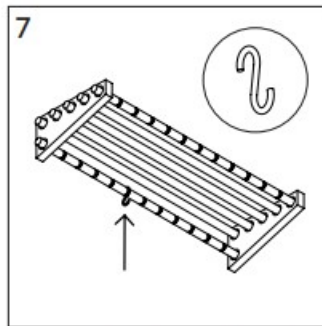

7
Place the hooks according to your own needs by clicking them into the grooves of the round poles with grooves.

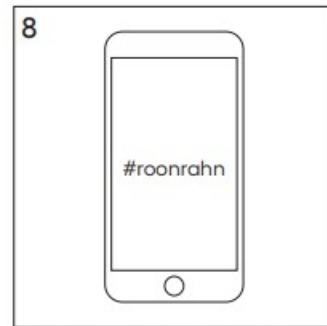

8
Share your brand new original Roon & Rahn product with your friend and be inspired by others.